5600 Series - Pivot Door

OO Sidelites - Panels Installation Instructions

Following **5600 Installation Instructions**, use the sequence below to set and anchor two or more sidelite panels after frame has been installed:

1. Remove Panel 2 supports at head and sill.
2. Slide Panel 1 into place along supports and set firmly into jamb.
3. Anchor Panel 1 through top and bottom rails into supports with screws provided.
4. Re-install Panel 2 supports at head and sill.
5. Remove panel 2 interlock.
6. Carefully slide Panel 2 along supports until rails abutt to Panel 1 interlock.
7. Re-attach Panel 2 interlock and secure panel to supports with screws provided.
8. Apply Black DC795 sealant at interlock/glass joint - tape and tool for a neat appearance.

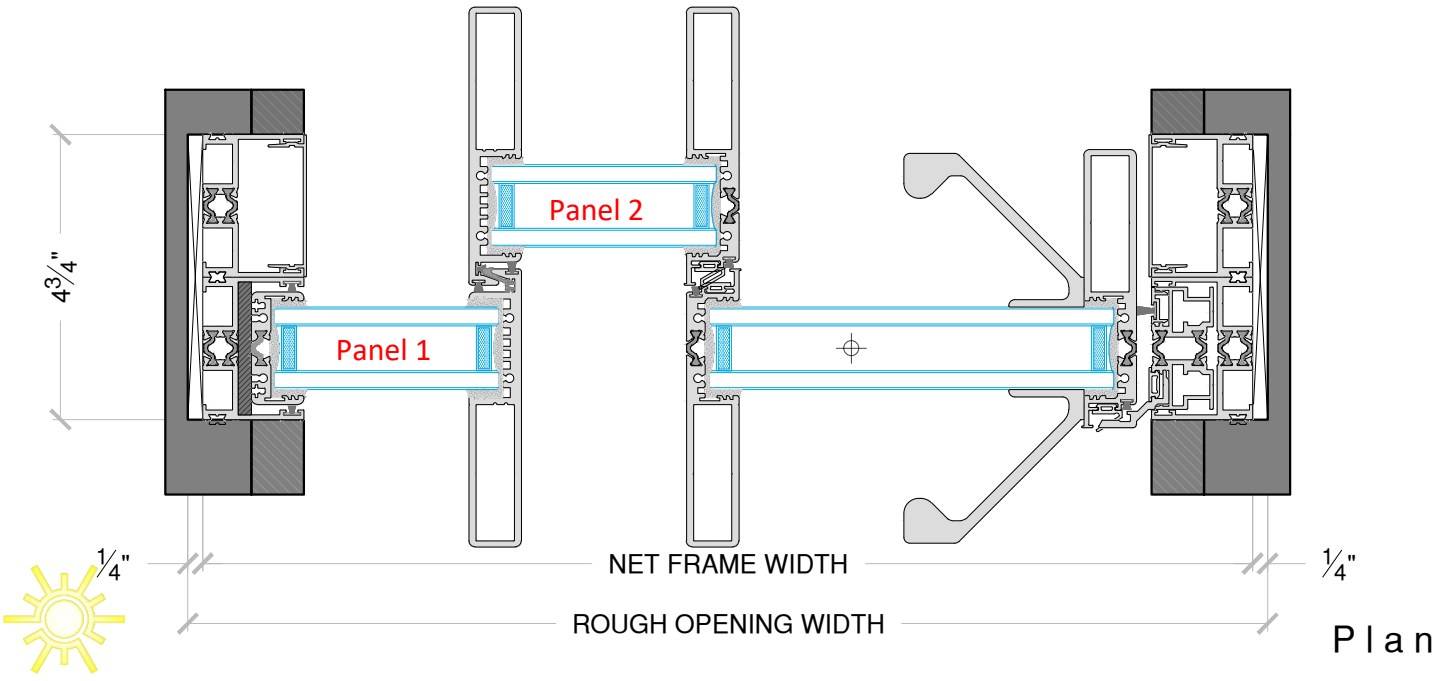

Plan