612 Pocket Cavity Kit Installation Instructions

Brio Australia
P: +61 2 87186718
W: brio.com.au
E: brio.sales@allegion.com

Brio UK
P: +44 191 2291224
W: briouk.com
E: brio.sales.uk@allegion.com

Brio USA
P: +1 585 3195599
W: briousa.com
E: brio.sales.usa@allegion.com

Recommended Tools

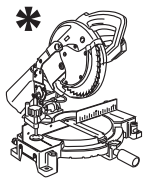

*NOTE: Sharp aluminium blade only

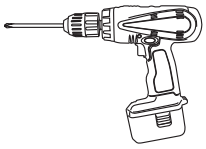

Kit Components

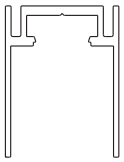

x1 RST TRACK

x2 WS-BR-A BRACKET

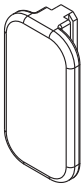

x1 WS-FP FINGER PULL



x4 SP8X10S SCREWS

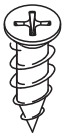

x8 SC8GX16S SCREWS

Opening Preparation dimensions shown in inches (mm)

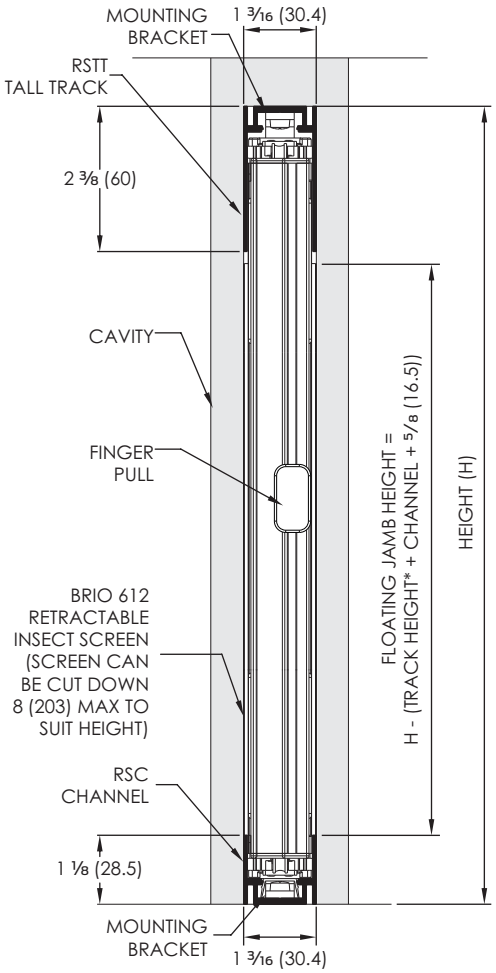

SCREEN RETRACTED IN CAVITY

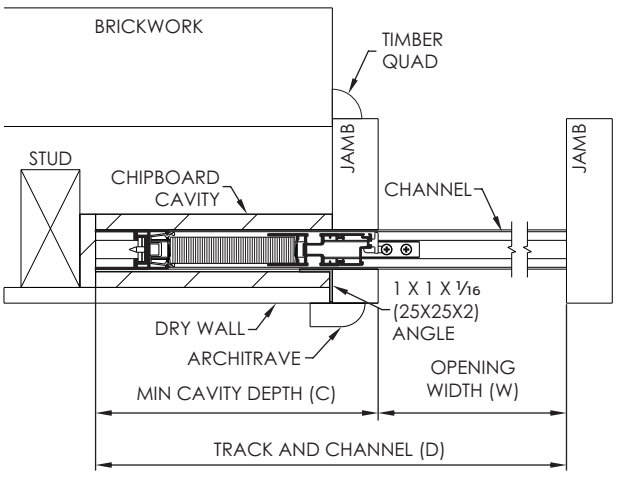

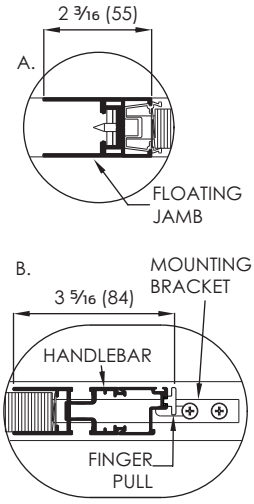

OPENING WIDTH (W)	SCREEN WIDTH	MIN CAVITY DEPTH (C)	TRACK AND CHANNEL (D)
42 3/16 (1071)	48 (1219)	5 13/16 (148)	48 (1219)
65 9/16 (1666)	72 (1829)	6 7/16 (163)	72 (1829)
88 7/8 (2257)	96 (2438)	7 1/8 (181)	96 (2438)
112 (2845)	120 (3048)	8 (203)	120 (3048)
135 5/16 (3437)	144 (3658)	8 7/8 (220)	144 (3658)
158 15/16 (4037)	168 (4267)	9 1/16 (231)	168 (4267)
181 5/16 (4606)	192 (4877)	10 11/16 (271)	192 (4877)

OPENING WIDTH (W) = TRACK AND CHANNEL (D) - MIN CAVITY DEPTH (C)
SCREEN WIDTH = TRACK AND CHANNEL (D)
* SEE "FLOATING JAMB PREPARATION"

Track and Channel

Fit track and channel

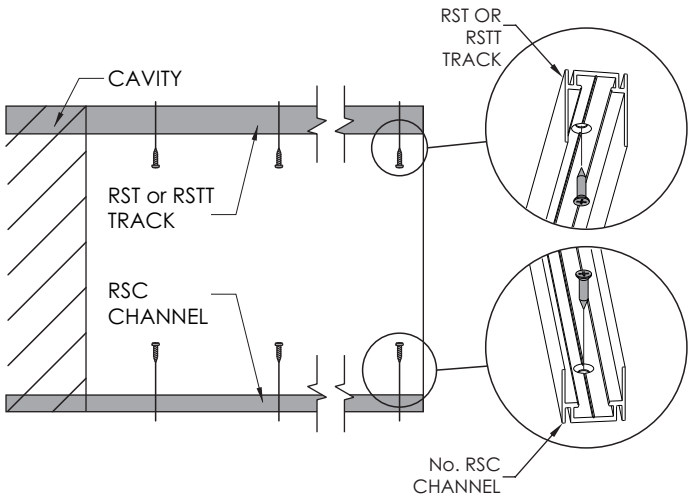

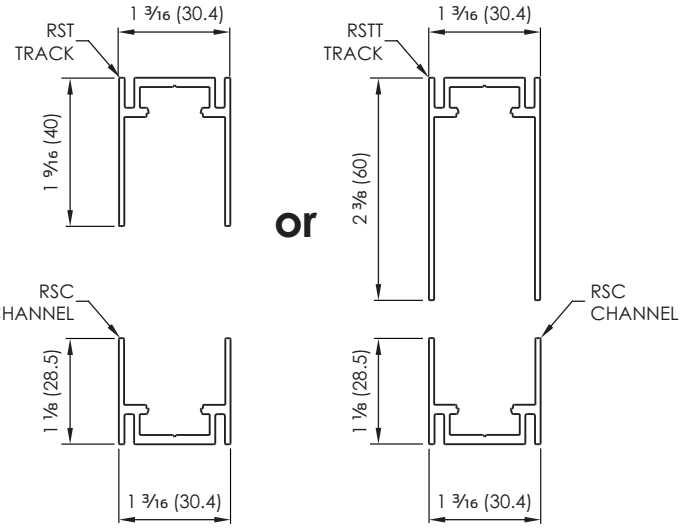

Floating jamb preparation

Cut RST and RSJ (Floating Jamb) to size

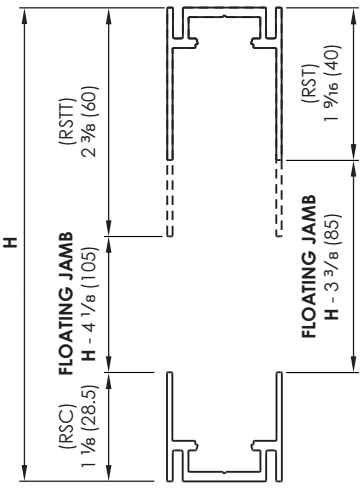

Screw fix using pre-existing holes in RSJ

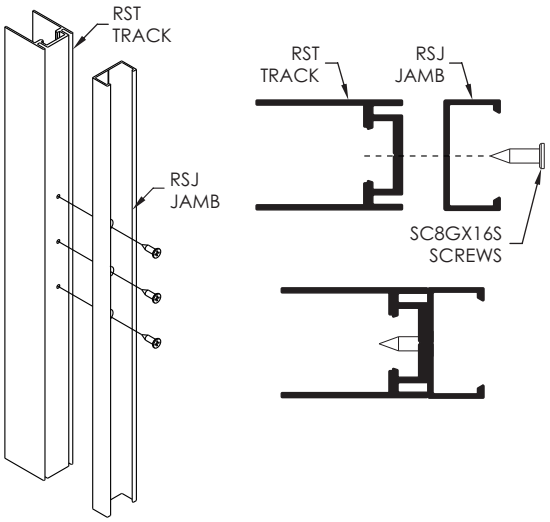

Insert bracket into pocket

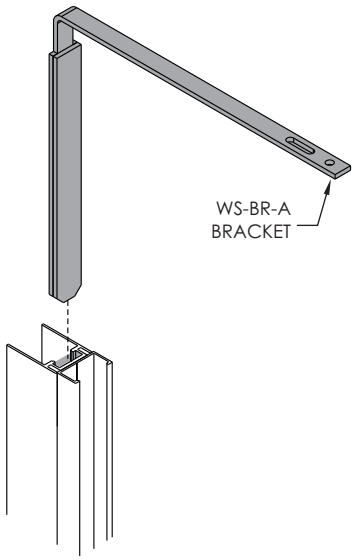

Fitting floating jamb

Push brackets all the way in.
Place floating jamb in track and channel.

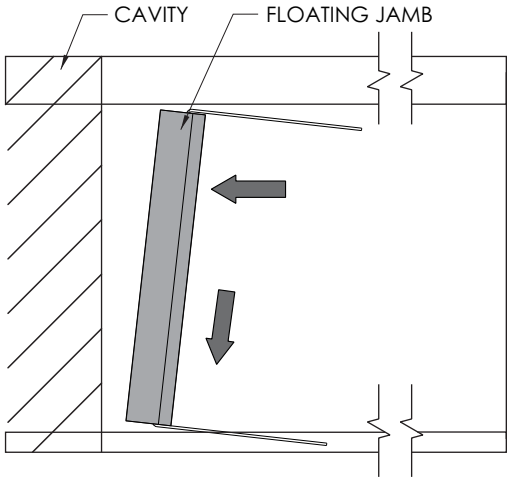

Extend brackets out to reach of the track and channel. Temporarily screw fix floating jamb to track and channel outside of the cavity using brackets

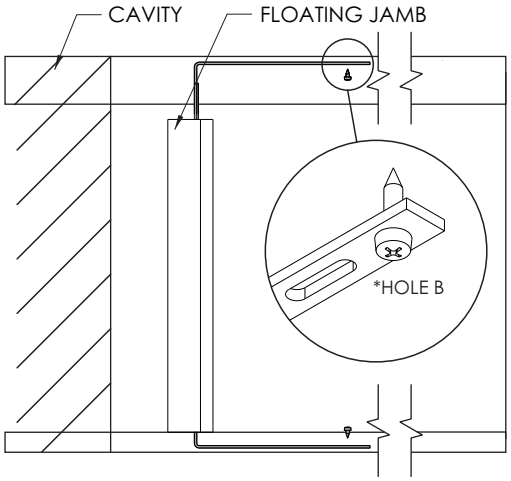

Fitting screen

Prepare screen as per instructions supplied (INSTSCREEN). Clip screen into floating jamb. Once screen has been clipped in, unscrew fixings between brackets, track and channel

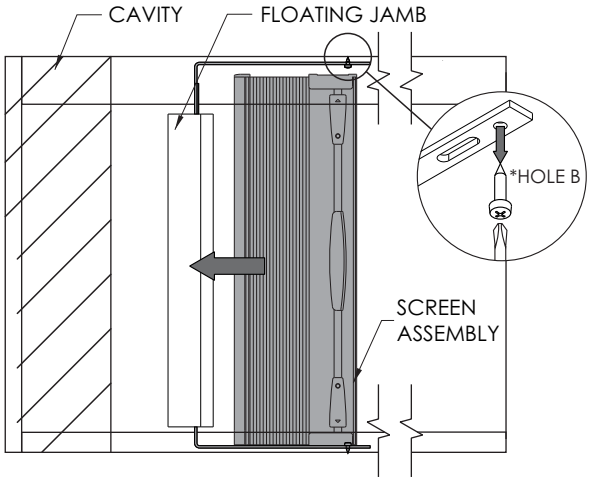

Push assembly into the cavity (Ensure screen is level). Screw fix brackets into place. Continue with screen installation as per INSTSCREEN.

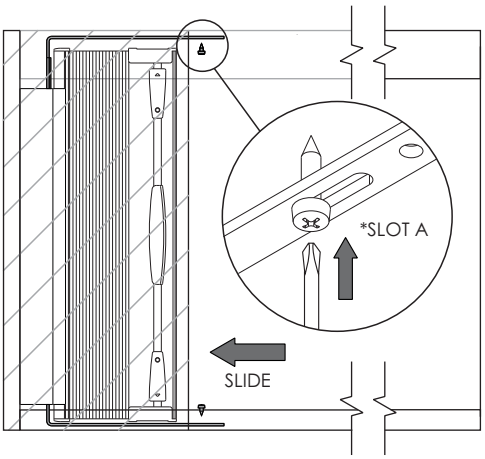

Pre-drill ⅛ (2.5) hole in handler bar cover (as shown below). Slide finger pull into t-slot and screw fix into place. Fit remaining parts as per INSTSCREEN

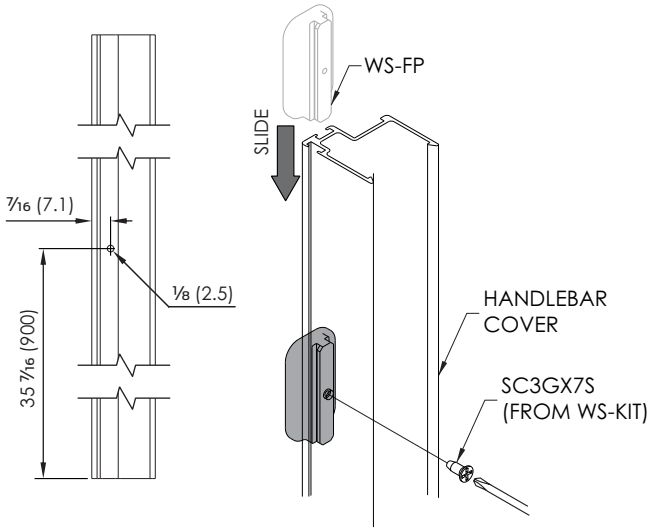

Before fitting handlebar cover (assembly as per screen instructions) ensure the cords are not twisted or tangled.

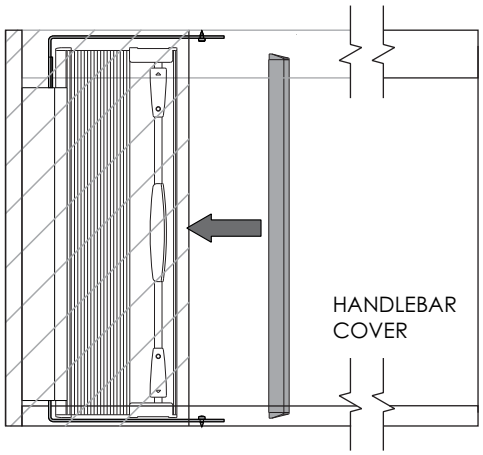

Adjust screen to line up to the edge of the cavity by loosening screw (A). Once lined up fix screws (A) and (B) into the bracket to lock it off.

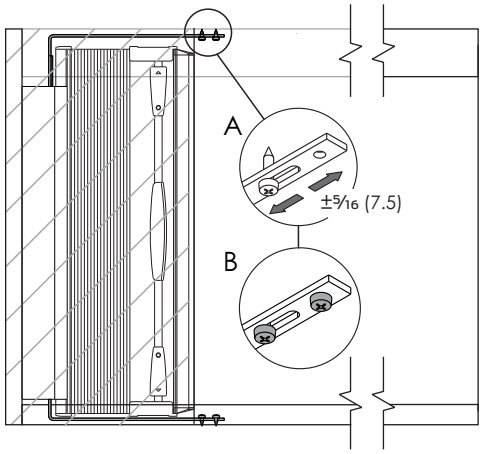
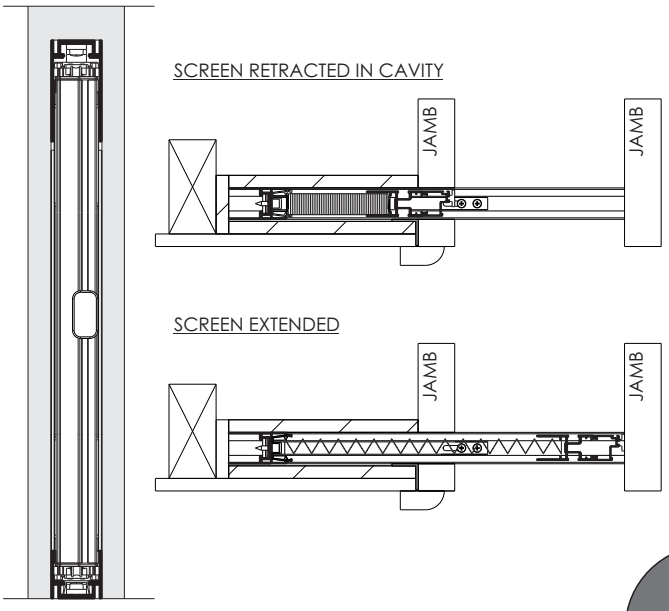
System Overview